2019 - 2020 DODGE 2500 WRAP

1229P

2 - 5/8 x 4 1/2 G8 Bolts
2 - 5/8 G8 Nuts
2 - 5/8 G8 Lock Washers
2 - 5/8 G8 Flat washers

2 - 1/2 x 4 1/2 G8 Bolts
2 - 1/2 G8 Nuts
2 - 1/2 G8 Lock Washers
2 - 1/2 G8 Flat Washers

4 - 1/2 X 2 G5 Bolts
2 - 1/2 X 1 1/2 G5 Bolts
6 - 1/2 G5 Nuts
6 - 1/2 G5 Lock Washers
12 - 1/2 G5 Flat Washers

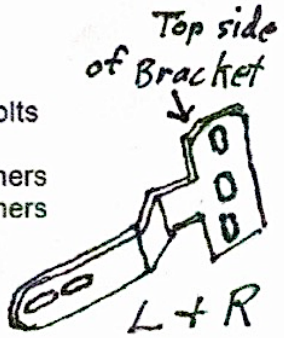

NOTE: If camera is present remove bottom center panel on the grillguard

STEP 1 - Remove the bumper bolts and remove the tow hooks.
STEP 2 - You may need to pull out the factory bumper enough to put the top brackets. You may need to disconnect the light and sensor connection. Once brackets are in place put bumper back in place and connect the light sensor back on.
STEP 3 - Put tow hooks back in place and put bottom bracket on the outside of the frame and bolt witn 2 factory bolts and 1 - 5/8 x 4 1/2 G8 Bolts on each side.
STEP 4 - Put grillguard in place and bolt on. Check alignment on the grillguard and tighten bolts. Yoy may need to periodically regithten bolts.



