



INSTALLATION INSTRUCTIONS

2019-2024 GM T1 AT4/TRAIL BOSS

2025 GM T1 AT4/TRAIL BOSS

1.5" SYSTEMS

FT21271i

NOTE: TO ORDER WEARABLE REPLACEMENT COMPONENTS DO NOT USE PART NUMBERS SHOWN ON THIS INSTRUCTION SHEET. GO TO FABTECH WEBSITE AND LOOK UP WEARABLE REPLACEMENT PARTS TO FIND THE PROPER PART NUMBER TO ORDER.

Fabtech Motorsports | 2213 Industrial Park Rd. Lancaster, SC 29720

Tech Line: 909-597-7800 | **Web:** www.fabtechmotorsports.com

FTS21271 1.5" BALL JOINT UCA SYS (2019-2024)		
4	FT1500U-3	UBOLT 9/16-18 X 12.50 X 2.63
2	FT20619	BALL JOINT
2	FT20275	UPPER SHOCK SPACER
1	FT20833	BALL JOINT UCA (DRIVER)
1	FT20834	BALL JOINT UCA (PASSENGER)
1	FT20895	HARDWARE SUBASSEMBLY
2	FTBK3	BLOCK 3"

FTS21310 1.5" BALL JOINT UCA SYS (2025)		
4	FT769U	UBOLT 9/16-18 X 12.50 X 2.63
2	FT20619	BALL JOINT
2	FT20275	UPPER SHOCK SPACER
1	FT20833	BALL JOINT UCA (DRIVER)
1	FT20834	BALL JOINT UCA (PASSENGER)
1	FT20895	HARDWARE SUBASSEMBLY
2	FTBK3	BLOCK 3"

FT20895 HARDWARE SUBASSEMBLY		
2	FT20835	SPRING PERCH SPACER
8	FT20836	CONTROL ARM WASHER
1	FT20896	HARDWARE KIT
1	FT21271i	INSTRUCTIONS
1	FTAS12	STICKER FT BLUE 10X4
1	FTAS16	DRIVER WARNING DECAL
1	FTREGCARD	REGISTRATION CARD
4	FT1037	BUSHING (OUTER)
4	FT1038	BUSHING (INNER)
4	FT626	SLEEVE
1	FTLUBE	URETHANE GREASE PACKET

FT20896 - HARDWARE KIT		LOCATION
4	1/4-28 GREASE FITTING	
6	M10 FLAT WASHER ZINC	
6	M10-1.5 GR C (CL 10) CROWNLOCK NUTS	
6	3/8" SAE WASHER	
6	3/8" SPLIT WASHER	
6	3/8-24 X 1-1/4" HEX BOLT	
16	5/16" SAE WASHER	
8	5/16-18 C-LOCK NUT	
8	5/16-18 X 1" HEX BOLT	
8	9/16 SAE WASHER	
8	9/16-18 NYLOCK NUT	
1	THREAD LOCKING COMPOUND 1 MIL	
6	7.5" STANDARD CABLE TIE BLACK	

- TOOL LIST -

Required Tools (Not Included)

Basic Hand Tools
Floor Jack
Jack Stands
Assorted Metric and S.A.E sockets, and Allen wrenches
Torque Wrench
Die Grinder w/ Cutoff Wheel or Sawzall

- PRE-INSTALLATION NOTES -

For technical assistance call: **909-597-7800** or e-mail: **info@fabtechmotorsports.com**

READ THIS BEFORE YOU BEGIN INSTALLATION -

Check all parts to the parts list above before beginning installation. If any parts are missing contact Fabtech at 909-597-7800 and a replacement part will be sent to you immediately.

Read all instructions thoroughly from start to finish before beginning the installation. If these instructions are not properly followed severe frame, driveline and / or suspension damage may occur.

Check your local city and state laws prior to the installation of this system for legality. Do not install if not legal in your area.

Prior to the installation of this suspension system perform a front end alignment and record. Do not install this system if the vehicle alignment is not within factory specifications. Check for frame and suspension damage prior to installation.

The installation of this suspension system should be performed by two professional mechanics.

This suspension must be installed with Fabtech shock absorbers.

Installation of all fasteners requires the use of provided thread locking compound with proper torque values as indicated throughout the installation. Apply thread locking compound upon the final torque of the fastener.

WARNING- Installation of this system will alter the center of gravity of the vehicle and may increase roll over as compared to stock.

Vehicles that receive oversized tires should check ball joints, uniballs, tie rods ends, pitman arm and idler arm every 2500-5000 miles for wear and replace as needed.

Verify differential fluid is at manufactures recommended level prior to kit installation. Installation of the kit will reposition the differential and the fill plug hole may be in a different position. (For example, if the manufacture recommends 3 quarts of fluid, make sure the diff has 3 quarts of fluid). Check your specific manual for correct amount of fluid.


FOOTNOTES -

- Will not fit models equipped with adaptive ride control.
- Fits crew cab, short bed models only.
- Will not fit vehicles equipped with super cruise


- INSTRUCTIONS -

FRONT SUSPENSION


1. Disconnect the negative terminal on the battery. Jack up the front end of the truck and support the frame rails with jack stands. **NEVER WORK UNDER AN UNSUPPORTED VEHICLE!** Remove the front tires. **IMPORTANT:** Using a paint pen mark straight line down the center of the coilover at the top cap, lower spring perch and the lower mount to the control arm. **SEE FIGURE 1**

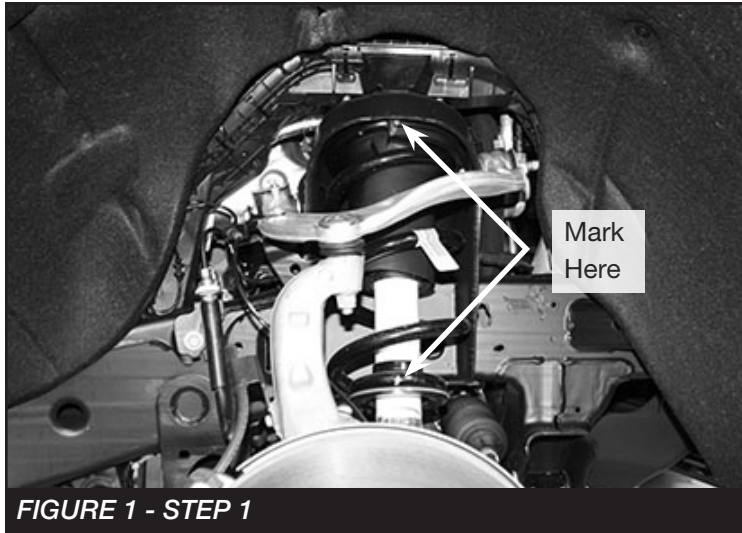

2. Starting with the passenger side. Disconnect the ABS wire bracket from the upper control arm and the brake line bracket from the knuckle. **SEE FIGURES 2-3**

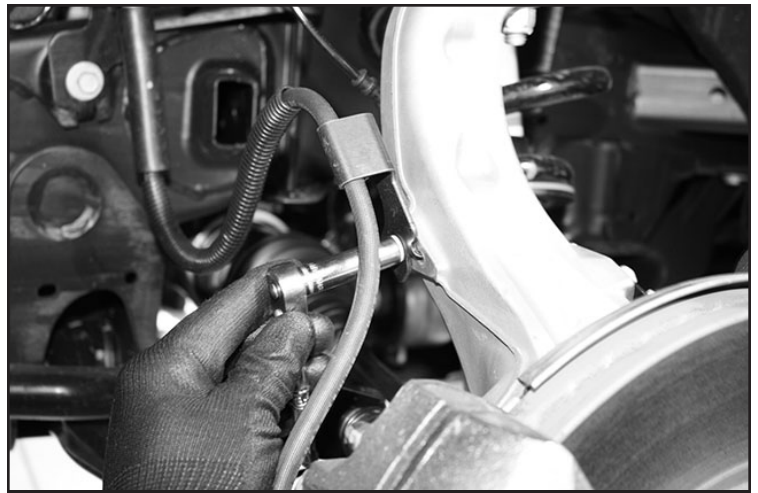

3. Remove the factory tie rod end nut and strike the knuckle with a hammer till the tie rod end comes loose. Save all hardware. Use care not to hit any other parts. **SEE FIGURES 4-5**

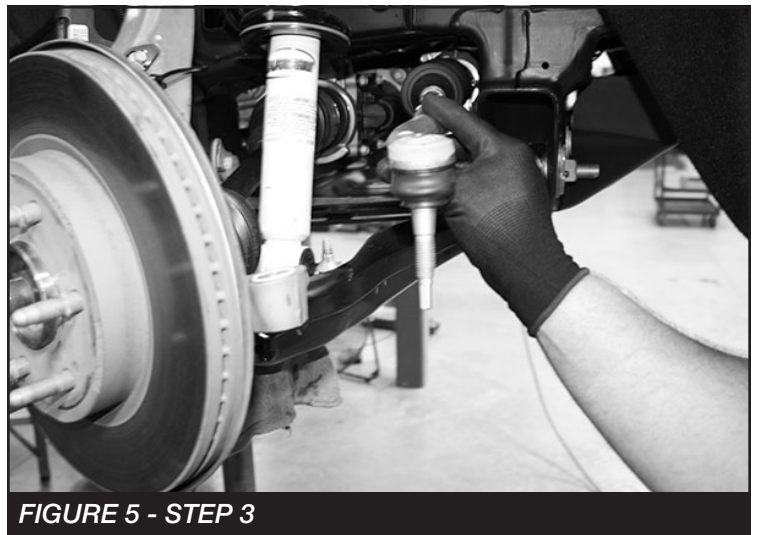

4. Using a 36mm socket, remove and save the axle hub nut. **SEE FIGURE 6**



FIGURE 6 - STEP 4

5. Remove and save the sway bar link nut from the bottom side of the lower control arm. **SEE FIGURE 7**



FIGURE 7 - STEP 5

6. Loosen the upper ball joint nut and strike the knuckle with a hammer until it comes loose from the upper control arm. Next, remove the factory nut. Then, detach the knuckle from the upper control arm. Push the knuckle to the side and secure if possible. **SEE FIGURE 8**

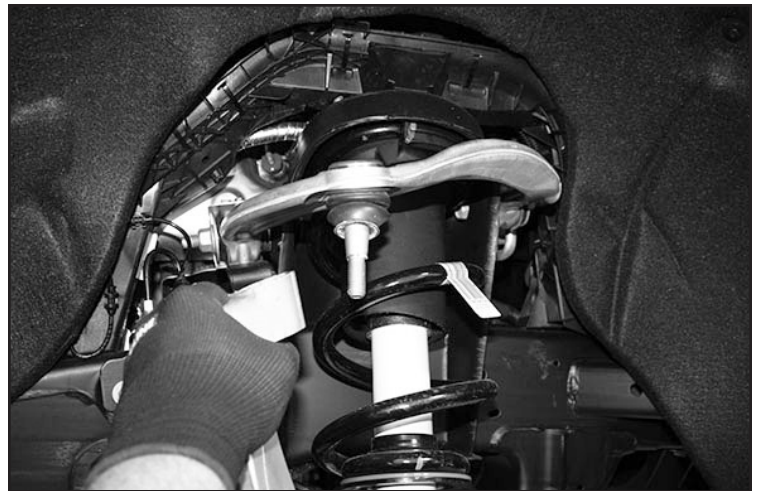


FIGURE 8 - STEP 6

7. Locate the plastic wire harness channel on the top of the passenger side coilover mount. Push it up and back to allow access to the three coilover nuts. Remove and discard the upper coilover nuts. **SEE FIGURES 9**



FIGURE 9 - STEP 7

8. Remove and discard the two lower coilover bolts. Then remove the coilover assembly from the vehicle. **SEE FIGURES 10-11**



FIGURE 10 - STEP 8

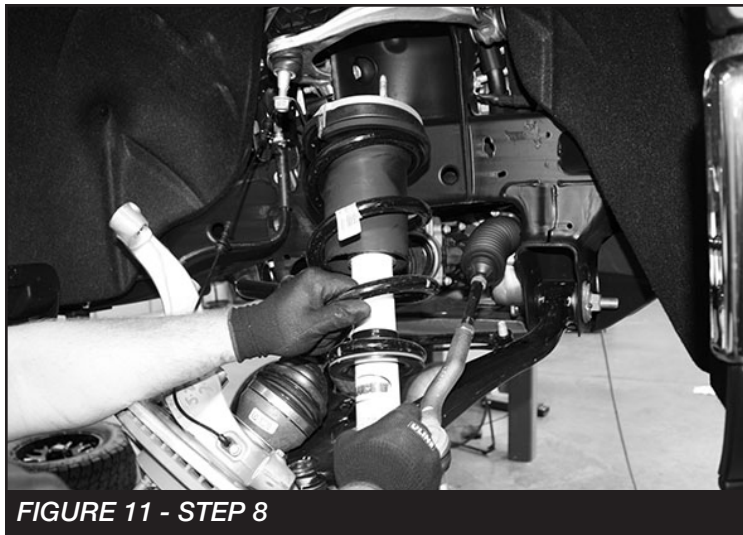


FIGURE 11 - STEP 8

9. Remove the factory upper control arm from the vehicle and save the hardware. Repeat steps 1-8 on the driver side.
- IF INSTALLING DIRT LOGIC COILOVERS REFER TO THE INSTRUCTIONS PROVIDED THEN SKIP TO STEP 19
10. Using a coil spring compressor. Carefully compress the coil spring until there is no pressure on the upper top cap. Loosen and remove the top cap nut then top cap and dust boot. **SEE FIGURES 12-13**

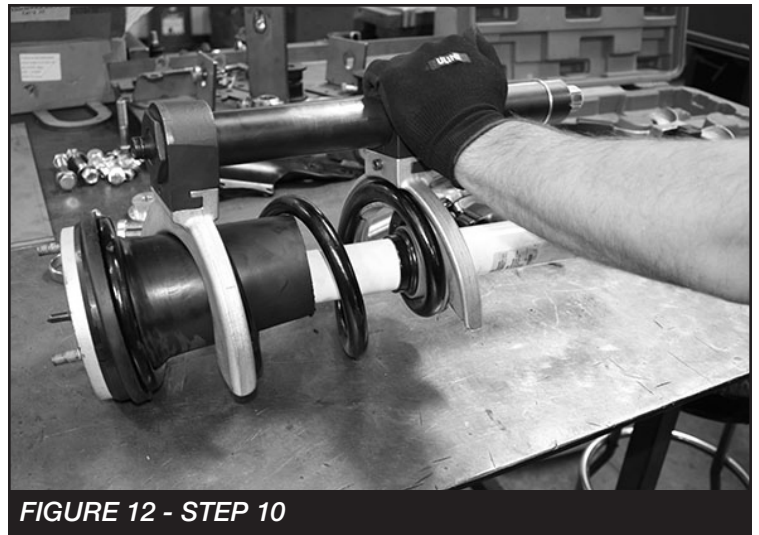


FIGURE 12 - STEP 10



FIGURE 13 - STEP 10

11. Remove the coil from the strut and set aside.
12. Remove the bump stop cap and save. Then, slide off the lower coil spring perch. **SEE FIGURES 14-16**



FIGURE 14 - STEP 12



FIGURE 15 - STEP 12



FIGURE 16 - STEP 12

13. Install FT20835 (Spring perch spacer) onto the strut. **Note:** the machined groove will seat around the lip on the strut body. SEE FIGURES 17-18



FIGURE 17 - STEP 13

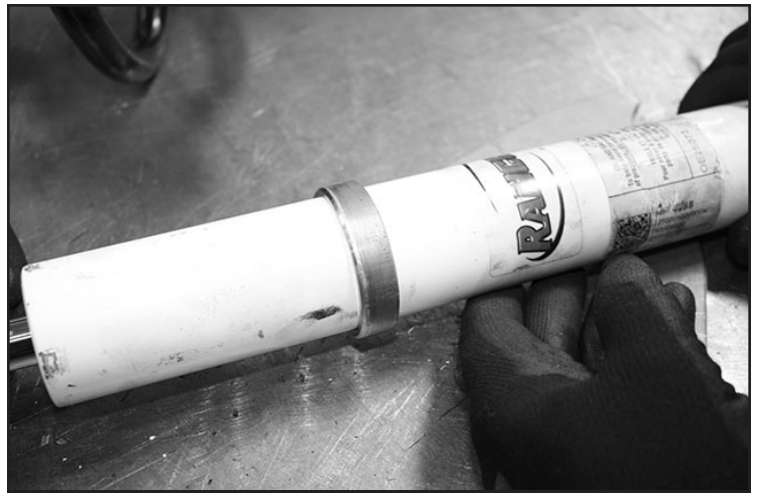


FIGURE 18 - STEP 13

14. Reinstall the lower spring perch. SEE FIGURE 19

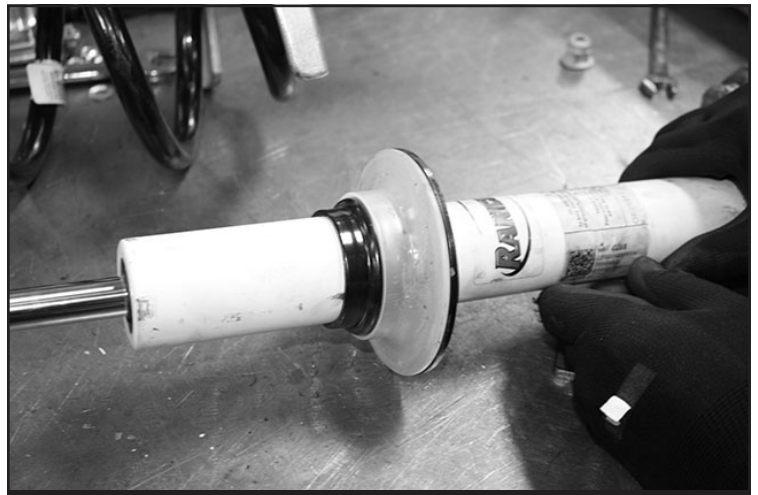


FIGURE 19 - STEP 14

15. Reinstall the bumpstop cap, compressed coil spring and the top cap and nut. **NOTE:** Before removing the spring compressor line up the marks in a straight line that were marked in step 1. Then, rotate the top cap 180 degrees so the mark is opposite from the rest. Torque the top cap nut to 35 ft-lbs.

16. Measure and cut 3/4" of thread off the end of the factory upper coilover studs. **SEE FIGURES 20**



FIGURE 20 - STEP 16

17. Install the FT20275 (Spacer) onto the top of the coilover using the supplied M10-1.5 nuts and flat washers. Torque to 35 ft-lbs. **SEE FIGURE 21**



FIGURE 21 - STEP 17

18. Repeat steps on the opposite side.

19. Locate the new Fabtech control arms, two FT1038 bushings, two FT1037 bushings, two FT84 grease zerks, and two sleeves. Using the supplied grease packet, grease the bushings and sleeves before installing into the control arm. **SEE FIGURE 22**

FT1037 Bushing

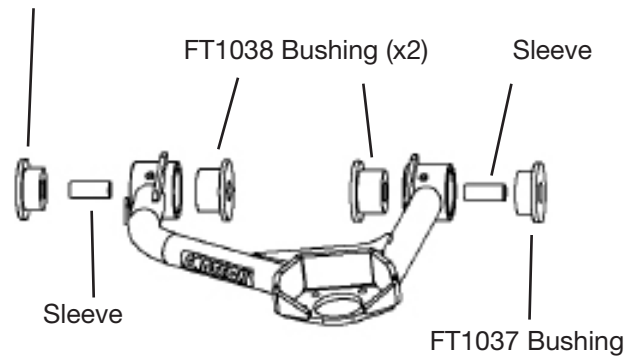


FIGURE 22 - STEP 19

20. Install FT20619 (Ball joint) onto the new upper control arm using the supplied 5/16"-18 x 1" bolts, washers and nuts from the hardware kit. Lube ball joint through zerk fittings. Torque to 29 ft-lbs. **SEE FIGURE 23**

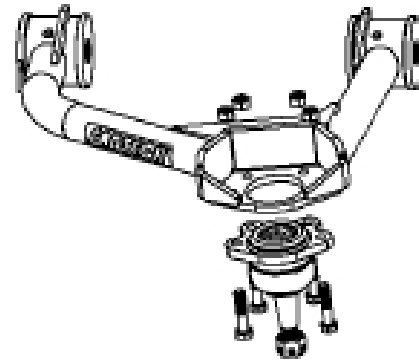


FIGURE 23 - STEP 20

21. Locate the factory bumpstop tabs on the frame mount. Using a cutoff wheel remove this tab completely off the mount and sand to a smooth finish. **SEE FIGURES 24-25**

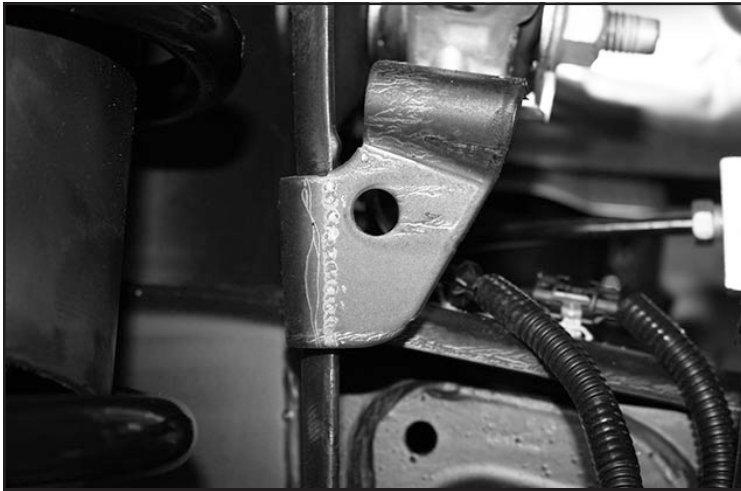


FIGURE 24 - STEP 21



FIGURE 25 - STEP 21

22. Install the FT20833 (Driver) & FT20834 (Pass) upper control arms using the factory bolts. **NOTE: When installing the arms, install a FT20836 (washer) on both sides of the bushings. Do not tighten at this time. Final locktite/ torque procedure will be done at step 26. SEE FIGURE 26**

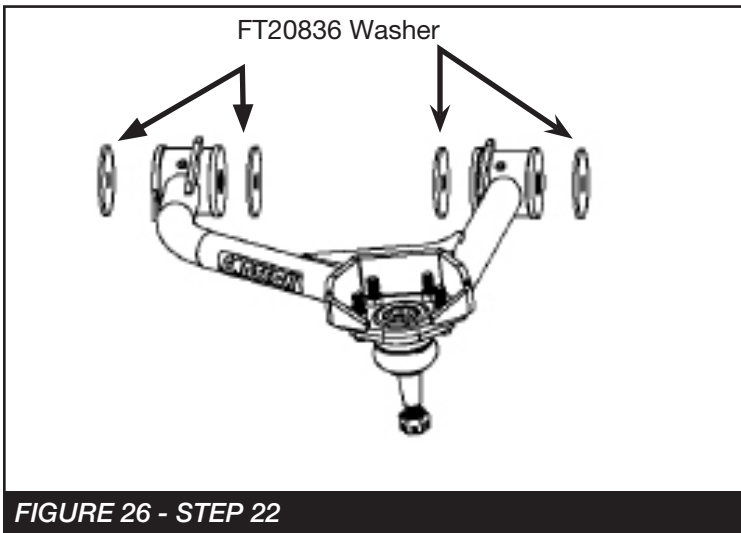


FIGURE 26 - STEP 22

23. Install the coilover assembly into the vehicle using the supplied 3/8" Bolts, lock washers and flat washers for the upper mount and the factory hardware for the lower mount. Torque the 3/8" to 49 ft-lbs and the factory hardware to 56 ft-lbs. **SEE FIGURES 27-28**

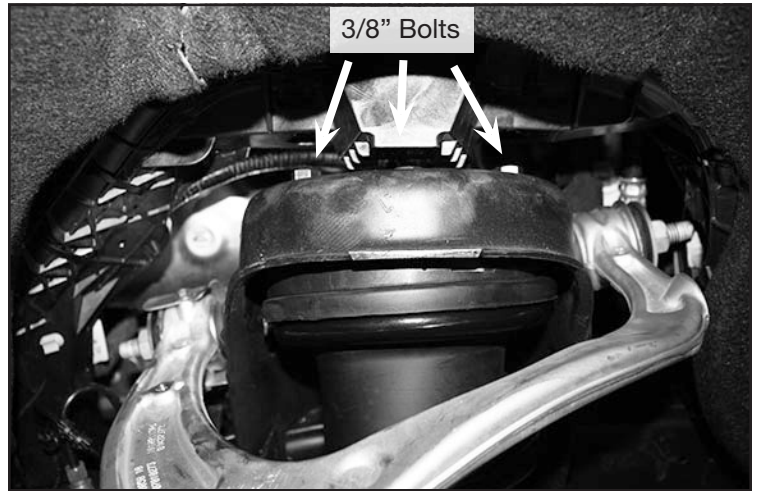


FIGURE 27 - STEP 12



FIGURE 28 - STEP 12

24. Repeat steps on the opposite side.

25. Reinstall the upper control arm to the knuckle, the sway bar link to the lower control arm and the tie rod end to the knuckle torque all nuts to 35 ft-lbs. Reinstall the axle hub nut and torque to 156 ft-lbs. Remove the bracket from the ABS sensor line and attach to the brake line hose using the supplied zip ties. Reinstall the brake line bracket to the knuckle using the factory hardware. Torque to 11 ft-lbs.

SEE FIGURE 29



FIGURE 29 - STEP 25

26. Using the supplied thread lock torque the upper control arm frame pocket hardware to 86 ft-lbs. **NOTE: Removal of the nut may be necessary to install the thread lock compound.**
27. Using the supplied zip ties. Secure the ABS wires to the factory brake hard line on the frame. **SEE FIGURE 30**

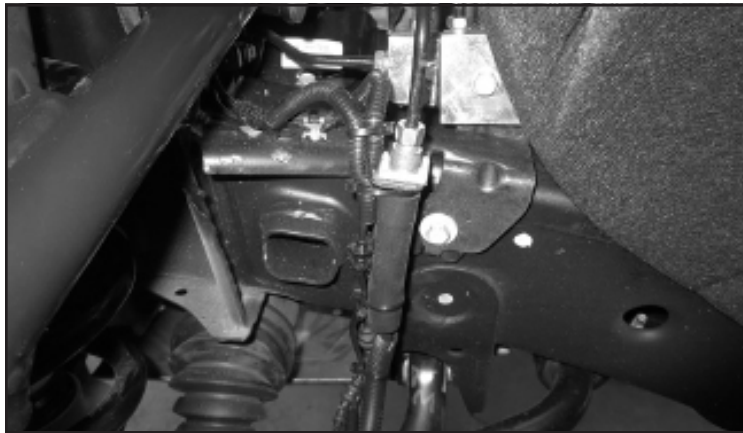


FIGURE 30 - STEP 27

REAR SUSPENSION

28. Jack up the rear end of the truck and support the frame rails with jack stands. **NEVER WORK UNDER AN UNSUPPORTED VEHICLE!** Remove the rear wheels/tires.
29. With the rear axle supported. Remove the rear shocks and save hardware. Remove the factory ubolts and blocks.
30. Install the new FTBK15 (1.5" Blocks) and FT1500U (ubolts) or FT768U (Ubolts) using the supplied 9/16" nuts and washers. Torque to 93 ft-lbs.
31. Install rear shocks using FTS7333 (Performance shocks) ,FTS6333 (Stealth Shocks) or FTS811452 (Dirt Logic Shock) with factory hardware. Torque to 100 ft-lbs.
32. Install tires and wheels and torque lug nuts to wheel manufacturer's specifications. Turn front tires left to right and check for appropriate tire clearance. **Note - Some oversized tires may require trimming of the front bumper & valance.**
33. Check front end alignment and set to factory specifications. Readjust headlights.
34. Recheck all bolts for proper torque.
35. Recheck brake hoses, ABS wires and suspension parts for proper tire clearance while turning tires fully left to right.
36. Check the fluid in the front and rear differential and fill if needed with factory specification differential oil. **Note - some differentials may expel fluid after filling and driving. This can be normal in resetting the fluid level with the new position of the differential/s.**
37. Install Driver Warning Decal. Complete product registration card and mail to Fabtech in order to receive future safety and technical bulletins on this suspension.

Vehicles that will receive oversized tires should check ball joints, uniballs and all steering components every 2500-5000 miles for wear and replace as required.

RE-TORQUE ALL NUTS, BOLTS AND LUGS AFTER 50 MILES AND PERIODICALLY THEREAFTER.

For technical assistance call: **909-597-7800**

- Product Warranty and Warnings -

Fabtech provides a Limited Lifetime Warranty to the original retail purchaser who owns the vehicle, on which the product was originally installed, for defects in workmanship and materials.

The Limited Lifetime Warranty excludes the following Fabtech items; bushings, bump stops, ball joints, tie rod ends, limiting straps, cross shafts, heim joints and driveshafts. These parts are subject to wear and are not considered defective when worn. They are warranted for 60 days from the date of purchase for defects in workmanship.

Dirt Logic and Performance Coilover take apart shocks are considered a serviceable shock with a one year warranty on leakage only. Service seal kits are available separately for future maintenance. All other shocks are covered under our Limited Lifetime Warranty.

Fabtech does not warrant any product for finish, alterations, modifications and/or installation contrary to Fabtech's instructions. Alterations to the finish of the parts including but not limited to painting, powder coating, plating and/or welding will void all warranties. Some finish damage may occur to parts during shipping, which is considered normal and is not covered under warranty.

Fabtech products are not designed nor intended to be installed on vehicles used in race applications or for racing purposes or for similar activities. (A "RACE" is defined as any contest between two or more vehicles, or any contest of one or more vehicle against the clock, whether or not such contest is for a prize). This warranty does not include coverage for police or taxi vehicles, race vehicles, or vehicles used for government or commercial purposes. Also excluded from this warranty are sales outside of the United States of America.

Installation of most suspension products will raise the center of gravity of the vehicle and will cause the vehicle to handle differently than stock. It may increase the vehicle's susceptibility to a rollover, on road and off road, at all speeds. Extreme care should be taken to operate the vehicle safely at all times to prevent rollover or loss of control resulting in serious injury or death. Fabtech front end Desert Guards may impair the deployment or operation of vehicles equipped with supplemental restraining systems/air bag systems and should not be installed if the vehicle is equipped as so.

Fabtech makes every effort to ensure suspension product compatibility with all vehicles listed on the website, but due to unknown auto manufacturer's production changes and/or inconsistencies by the auto manufacturer, Fabtech cannot be responsible for 100% compatibility, including the fitment of tire and wheel sizes listed. The Tire and Wheel sizes listed in Fabtech's website are only a guideline for street driving with noted fender trimming. Fabtech is not responsible for damages to the vehicle's body or tires. Fabtech is not responsible for premature wear of factory components due to the installation of oversized tires and wheels.

Fabtech's obligation under this warranty is limited to the repair or replacement, at Fabtech option, of the defective product only. All costs of removal, installation or re-installation, freight charges, incidental or consequential damages are expressly excluded from this warranty. Fabtech is not responsible for damages and/or warranty of other vehicle parts related or non related to the installed Fabtech product. This warranty is expressly in lieu of all other warranties expressed or implied. This warranty shall not apply to any product that has been subject to accident, negligence, alteration, abuse or misuse as determined by Fabtech.

Fabtech suspension components must be installed as a complete system including shocks as shown on our website. All warranties will become void if Fabtech parts are combined and/or substituted with other aftermarket suspension products. Combination and/or substitution of other aftermarket suspension parts may cause premature wear and/or product failure resulting in an accident causing injury or death. Fabtech does not warrant products not manufactured by Fabtech.

Depending on the condition of the factory suspension components retained after the installation of a Fabtech suspension not all vehicles may have the same ride stance front to rear as described in the website. The blue color of suspension components shown in all Fabtech photographs are for display purposes only. Majority of all Fabtech components will be black specifically where noted with part numbers ending in BK.

Installation of Fabtech product may void the vehicles factory warranty; it is the consumer's responsibility to check with their local vehicle's dealer for warranty disposition before the installation of the product. Some state laws may prohibit modification of suspension to a vehicle in whole or in part. It is the responsibility of the installer and consumer to consult local laws prior to the installation of any Fabtech suspension product to comply with such written laws.

It is the responsibility of the distributor and/or the retailer to review all warranties and warnings of Fabtech products with the consumer prior to purchase.

Fabtech reserves the right to super cede, discontinue, change the design, finish, part number and/or application of parts when deemed necessary without written notice. Fabtech is not responsible for misprints or typographical errors within the website or price sheet. For the most recent Product Warranty and Warnings visit our website www.fabtechmotorsports.com